


Citizen Movement Caliber C50* Abbreviated Setting Instructions

FEATURES

- Analog and Digital Display
- Dual Dive Display
- Automatic Calendar
- Daily Alarm
- 24 hour 1/1000 second Chronograph
- Dive Log Memory
- Depth Alarm
- Pressure Sensor
- Water Sensor
- Temperature Sensor
- Rapid Ascent Alarm

BENEFITS

- Time, Calendar and Dual Time
- Show Current Depth and Elapsed Time of Dive
- Automatic Correction
- Convenient for Travel
- Split Second Accuracy
- Records Dive Details
- Backup Reminder
- Accurately Plan Dive
- Depth Meter
- Dive Ready When Wet
- Displays Water Temperature
- Safely Terminate Dive

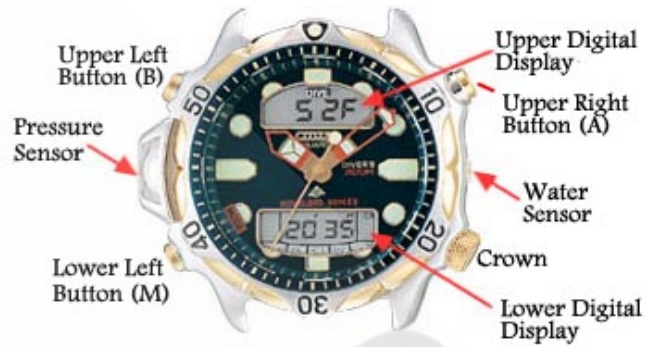

[Click Here for Full Setting Instructions \(380k pdf\)](#)

IMPORTANT NOTE: After a battery change, an ALL RESET is necessary. We recommend batteries be change by an Authorized Service center so that a water test can be performed to ensure gaskets are in good condition.

ALL RESET PROCEDURE – NOTE: This will erase all stored information from memory.

- Unscrew the crown from the case and pull out one 'click'.
- Press and hold the upper right (A), upper left (B) and lower left (M) buttons for 3 seconds and release.
- The alarm will sound twice to confirm the all reset.
- Proceed with setting the digital time.

TO SWITCH MODES

- Press and release the lower left button (M). The modes will be changed in the following sequence: Time/Calendar (or seconds), Alarm, Chronograph, Dive Log and Dive Alarms.

TO SET THE DIGITAL TIME (SET ANALOG TIME AFTER DIGITAL IS SET)

- Press and hold the upper left button (B) for 3 seconds. Seconds will flash.
- Press and release the upper right button (A). Seconds will reset to "00" and start counting upward again.
- Press the upper left button (B) and minutes will flash.
- Press the upper right button (A) to advance minutes. Hold button down for rapid advance.
- Press the upper left button (B). Hours will flash.
- Press the upper right button (A) to advance hours. If in 12-hour mode check for A or P to indicate AM or PM.
- Press the upper left button (B). Month number will flash.
- Press the upper right button (A) to advance month.
- Press the upper left button (B). Date will flash.
- Press the upper right button (A) to advance date.
- Press the upper left button (B). Year will flash.
- Press the upper right button (A) to advance year. Auto calendar is self-correcting through the year 2099.
- Press the upper left button (B). 12H/24H will flash.
- Press the upper right button (A) to select 12H for AM/PM time or 24H for military time.
- Press the upper left button (B) to finalize digital time setting.

TO SET THE ANALOG TIME

- Unscrew the lock down crown until it is free of the case.
- Pull the crown one 'click' when the second hand is at the 12:00 position
- Turn the crown clockwise and advance hands one minute ahead of digital time. When digital seconds are at '00', push the crown in. Both digital and analog seconds now match. Always remember to press crown firmly and turn it clockwise until it is screwed tightly against the case after setting hands.

TO SET THE DAILY ALARM

- Press the lower left button (M) to move display to alarm mode.
- Press the upper left button (B) for 3 seconds. Hours will flash and ON/OFF display will show ON.
- Press the upper right button (A) to advance hours. Pay particular attention to A (AM) or P (PM) unless time is in military time (24H)
- Press the upper left button (B). Minutes will flash.
- Press the upper right button (A) to advance minutes.
- Press the upper left button (B) to finalize setting.
- While in alarm mode, press the upper right button (A) to activate or deactivate the alarm.(ON/OFF).

TO USE THE CHRONOGRAPH

- Press the lower left button (M) to move display to chronograph mode. Upper digital display will show '0' hours and '00' minutes (if in reset condition). The lower digital display will show '00-' seconds and '-1/100' second.
- Press the upper right button (A) to start or stop counting. When counting is stopped, press the upper left button (B) to reset display to zeros. The upper right button (B) may be used to display the split time while chronograph is running.

TO CHECK THE DIVE LOG

- Move display to dive log mode by pressing the lower left button (M).
- First items displayed show the dive number (upper digital display) and month and date (lower digital display) of the last dive for 3 seconds and then switches to maximum depth of the last dive in the upper display and the elapsed time (total time) of the last dive in the lower display.

- Press the upper right button (A); log display shows dive time (upper digital display) and dive finish time (lower digital display).

- Press the upper right button (A); log display shows the average depth of the last dive (upper digital display) and the lowest water temperature during the last dive (lower digital display).

TO SET THE DIVE ALARMS

- Move display to dive alarm mode (D.A.L.) by pressing the lower left button (M). The upper digital display now shows depth alarm setting and lower digital display shows dive time alarm setting.
- Press the upper left button (B) for 3 seconds. Depth figure (upper digital display) begins to flash and lower digital display changes to number of times during the dive you want the depth alarm to sound.
- Press the upper right button (A) to increase depth alarm setting in 3-foot increments. Press and hold the upper right button (A) down for rapid advancement.
- Press the upper left button (B). The number of times you want the depth alarm to sound during the dive will flash.

- As the upper right button (A) is pressed, figure will change in the following sequence: ON, OFF, -1, -2, -3, -4 and -5. When a selection is made, press the upper left button (B); lower display changes back to dive time alarm figure (flashing). Press the upper right button (A) to increase dive time in 5-minute increments to a maximum of 95 minutes. Press the upper left button (B) to finalize dive alarm settings. Press the lower left button (M) to return to time/calendar.

NOTE: While in time/calendar mode, lower display can be changed to display seconds or calendar by pressing the upper right button (A). Hold the upper right button (A) down for 3 seconds to switch to temperature display. To switch back to seconds, press the upper right button (A).

For additional features and instructions, please refer to the full instruction manual or visit our web site at www.citizenwatch.com